


## CONFIGURATION EXAMPLES

Configuration of OS Operator 2.0 Top-Hung 2 locking points

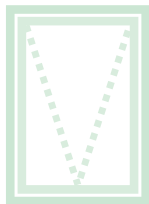


<b>Sash height [mm]</b>	450 ÷ 2000
<b>Sash width [mm]</b>	596 ÷ 1500
<b>Cremona</b>	01128 - 01171
<b>Mechanism</b>	02009
<b>Fastening mechanisms</b>	02067 (2 pcs)
<b>Arms</b>	02054 - 02055 - 02064 - 02065

Configuration of OS Operator 2.0 Top-Hung 4 locking points

<b>Sash height [mm]</b>	542 ÷ 2000
<b>Sash width [mm]</b>	708 ÷ 1500
<b>Cremona</b>	01128 - 01171
<b>Mechanism</b>	02009
<b>Drive</b>	02066 (2 pcs)
<b>Fastening mechanisms</b>	02067 (4 pcs)
<b>Arms</b>	02054 - 02055 - 02064 - 02065

Configuration of OS Operator 2.0 Side-Hung 2 locking points

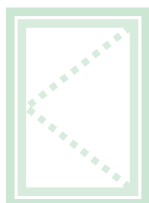

<b>Sash height [mm]</b>	596 ÷ 1600
<b>Sash width [mm]</b>	450 ÷ 900
<b>Cremona</b>	01128 - 01171
<b>Mechanism</b>	02009
<b>Fastening mechanisms</b>	02067 (2 pcs)
<b>Arms</b>	02054 - 02055 - 02064 - 02065

Configuration of OS Operator 2.0 Side-Hung 4 locking points

<b>Sash height [mm]</b>	704 ÷ 1600
<b>Sash width [mm]</b>	450 ÷ 900
<b>Cremona</b>	01128 - 01171
<b>Mechanism</b>	02009
<b>Drive</b>	02066 (2 pcs)
<b>Fastening mechanisms</b>	02067 (4 pcs)
<b>Arms</b>	02054 - 02055 - 02064 - 02065