



## CONFIGURATION EXAMPLES

## OS Operator Top-Hung Configuration

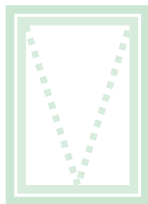

<b>Sash height [mm]</b>	<b>450 ÷ 2000</b>	<b>450 ÷ 2000</b>
<b>Sash width [mm]</b>	500 ÷ 800	801 ÷ 1500
<b>Cremona</b>	01128 - 01171	01128 - 01171
<b>Mechanism</b>	020021 - 020021	02000
<b>Arms</b>	02054 - 02055 - 02064 - 02065	02054 - 02055 - 02064 - 02065

## OS Operator Side-Hung Configuration

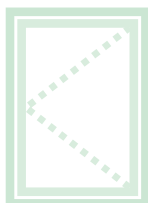

<b>Sash height [mm]</b>	<b>450 ÷ 900</b>	<b>450 ÷ 900</b>
<b>Sash width [mm]</b>	500 ÷ 800	801 ÷ 2500
<b>Cremona</b>	01128 - 01171	01128 - 01171
<b>Mechanism</b>	020021 - 020021	02000
<b>Arms</b>	02054 - 02055 - 02064 - 02065	02054 - 02055 - 02064 - 02065