


CONFIGURATION EXAMPLES

FUTURA 3D A & F

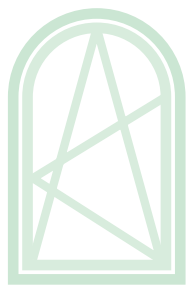


Basic arched configuration with Cremone

MAIN SASH		
Sash width	320 ÷ 1000	1001 ÷ 1700
Mechanism	04671K	04671K
Additional arm	-	04301K
Cremone	01039 - 01090K	01039 - 01090K

Basic arched configuration with window handle

MAIN SASH		
Sash width	320 ÷ 1000	1001 ÷ 1700
Mechanism	04671K	04671K
Mechanism	01061	01061
Additional arm	-	04301K
Window handle	02476 - 02415 - 00997	02476 - 02415 - 00997

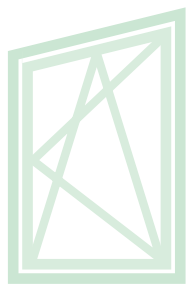


Basic sloping window configuration with Cremone

MAIN SASH		
Sash width	320 ÷ 1000	1001 ÷ 1700
Mechanism	04671K	04671K
Variable corner drive	04023K	04023K
Additional arm	-	04301K
Cremone	01039 - 01090K	01039 - 01090K

Basic sloping window configuration with window handle

MAIN SASH		
Sash width	320 ÷ 1000	1001 ÷ 1700
Mechanism	04671K	04671K
Mechanism	01061	01061
Variable corner drive	04023K	04023K
Additional arm	-	04301K
Window handle	02476 - 02415 - 00997	02476 - 02415 - 00997

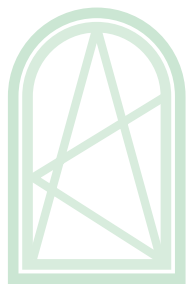

Basic arched configuration with NP Supra

MAIN SASH		
Sash width	320 ÷ 1000	1001 ÷ 1700
Mechanism	04671K	04671K
Mechanism	0395301	0395301
Additional arm	-	04301K
NP Supra	03962 - 03963	03962 - 03963

Basic sloping window configuration with NP Supra

MAIN SASH		
Sash width	320 ÷ 1000	1001 ÷ 1700
Mechanism	04671K	04671K
Mechanism	0395301	0395301
Variable corner drive	04023K	04023K
Additional arm	-	04301K
NP Supra	03962 - 03963	03962 - 03963

