

CHIC 130 SASH

Functions

CHIC Sash is a mechanism used for manufacturing a modern and minimalist interior side-hung casement thanks to the possibility of combining CHIC hinges with 180° opening with the innovative SUPRA 7 window handle without rosette.

Technical Features

CHIC 130 Sash hardware is offered with concealed hinges used to make sashes up to a minimum width of 200 mm:

- 0° mechanism - closed sash
- 90° mechanism - open sash

Making a CHIC 130 Sash requires:

- CHIC 130 sash hinges
- SUPRA 7 or Cremone window handles and Giesse window handles
- Fastening mechanisms (terminals and strikers)


Sash minimum and maximum dimensions:

Width: 200 – 1500 mm

Height: 600 – 2500 mm.




CONFIGURATION EXAMPLES



Single CHIC 130 Sash configuration with standard profiles (two-way)

| Article | Qty | Item code |
|--------------------------|--------|-------------------------------|
| Supra 7 window handle | 1 pc. | 04153 - 04154 - 04155 - 04156 |
| Two-way movement | 1 pc. | 0102001 |
| Giap/Adjustable terminal | 2 pcs. | 02114K - 02188K |
| Single striker | 2 pcs. | 01348K |
| Raising component | 1 pc. | 02336 |
| CHIC - Sash hinge set | 1 pc. | 044241 - 044242 |

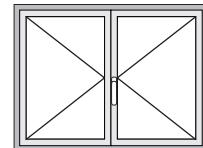

Double CHIC 130 sash configuration with standard profiles (two-way)

| Article | Qty | Item code |
|----------------------------------|--------|-------------------------------|
| Supra 7 window handle | 1 pc. | 04153 - 04154 - 04155 - 04156 |
| Two-way movement | 1 pc. | 0102001 |
| Giap/Adjustable terminal | 2 pcs. | 02114K - 02188K |
| Giap/Adjustable Bolt | 2 pcs. | 02111K - 02168K |
| Double striker | 2 pcs. | 01349 |
| Raising component | 2 pcs. | 02336 |
| CHIC - Right-hand sash hinge kit | 1 pc. | 044241 |
| CHIC - Left-hand sash hinge kit | 1 pc. | 044242 |

Single CHIC 130 Sash configuration with minimal profiles (one-way)

| Article | Qty | Item code |
|-----------------------|--------|-------------------------------|
| Supra 7 window handle | 1 pc. | 04153 - 04154 - 04155 - 04156 |
| One-way movement | 1 pc. | 00949 |
| Fixed pawl | 2 pcs. | 04027K |
| Adjustable striker | 2 pcs. | 01347K |
| Sash support cap | 1 pc. | 02306 |
| CHIC - Sash hinge set | 1 pc. | 044241 - 044242 |

Double CHIC 130 Sash configuration with minimal profiles (one-way)

| Article | Qty | Item code |
|----------------------------------|--------|-------------------------------|
| Supra 7 window handle | 1 pc. | 04153 - 04154 - 04155 - 04156 |
| One-way movement | 1 pc. | 00949 |
| Fixed pawl | 2 pcs. | 04027K |
| Adjustable striker | 2 pcs. | 01347K |
| Giap/Adjustable Bolt | 2 pcs. | 02111K - 02168K |
| Main sash support cap | 1 pc. | 02306 |
| Secondary sash support cap | 1 pc. | 02336 |
| Single striker | 2 pcs. | 01348 |
| CHIC - Right-hand sash hinge kit | 1 pc. | 044241 |
| CHIC - Left-hand sash hinge kit | 1 pc. | 044242 |